


# Water Specialist SQ Solar Powered Control Valve Programming Manual

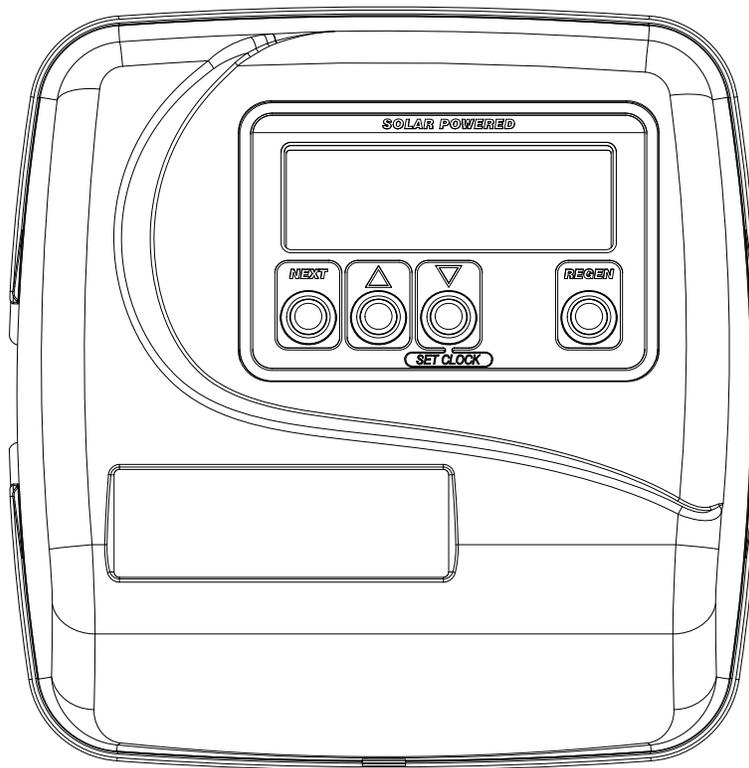

## OPERATION AND INSTRUCTION MANUAL FOR OEM ONLY

*Please Note:* This operation and instruction manual is for the training of the OEM and for the OEM to use to train their customers. This document is not to be used as the complete system manual.



## Table of Contents

Front Cover and Drive Assembly .....	4
Wiring Diagram .....	5
Regeneration and Error Screens, Button Operation and Function, Regeneration Cycles and Times .....	6
User Displays .....	7
Configuration Settings .....	8
OEM Softener System Setup .....	10
Setting Options Table .....	12
OEM Filter System Setup .....	13
Installer Display Settings .....	14
Diagnostics .....	15
Battery Diagnostics .....	17


### Front Cover and Drive Assembly

Drawing No.	Order No.	Description	Quantity
1	V3175SP-01	WS1SP FRONT COVER ASSEMBLY	1
2	V3107-01	WS1 MOTOR	1
3	V3814-01	WS1 DRIVE BRACKET SOLAR & SPRING CLIP	1
4	V4072SQ-04BOARD	WS1THRU2 SQ SOLAR 20P PCB REPL	1
5	V3110	WS1 DRIVE GEAR 12X36	3
6	V3109	WS1 DRIVE GEAR COVER	1
7	V3835-02	WS1SP BATTERY PACK CHARGED W/TIE	1
8	V3842	WS1SP SOLAR PANEL W/BRKT ASY	1
Not Shown	V3186-06	WS1 POWER SUPPLY US 15VDC HOCP	1
Not Shown	V3178	WS1 DRIVE BACK PLATE	1


Refer to Control Valve Service Manual for other drawings and part numbers.

Power Supply	U.S.	International
Supply Voltage	100-120 VAC	100-240 VAC
Supply Frequency	50/60 Hz	50/60 Hz
Output Voltage	15 VDC	15 VDC
Output Current	500 mA	500 mA


When replacing the battery, align positives and push down to fully seat.

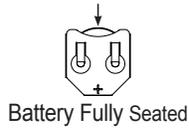


Correct Battery Orientation

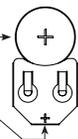 

Battery replacement is 3 volt lithium coin cell type 2032.

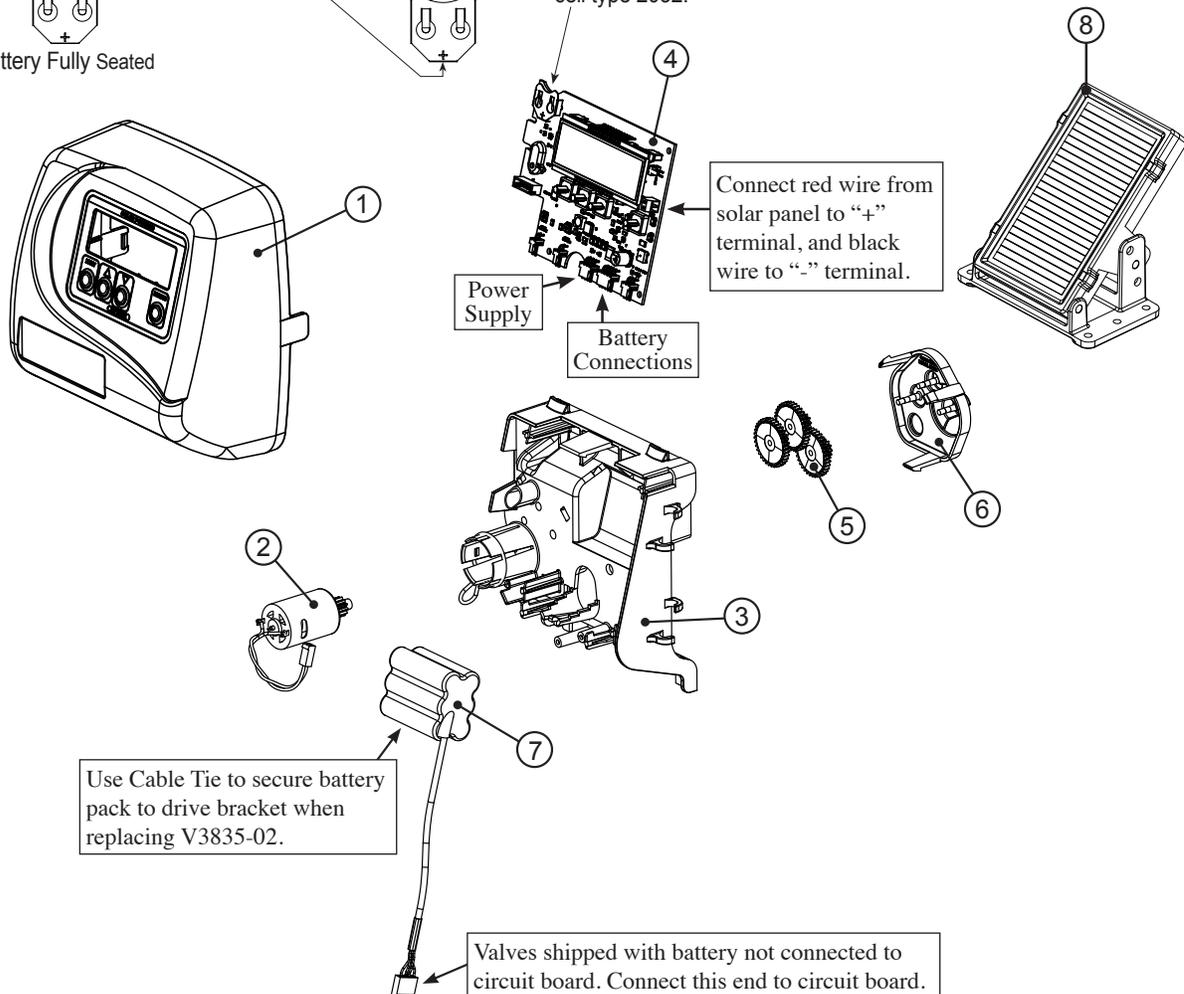

# Wiring Diagram

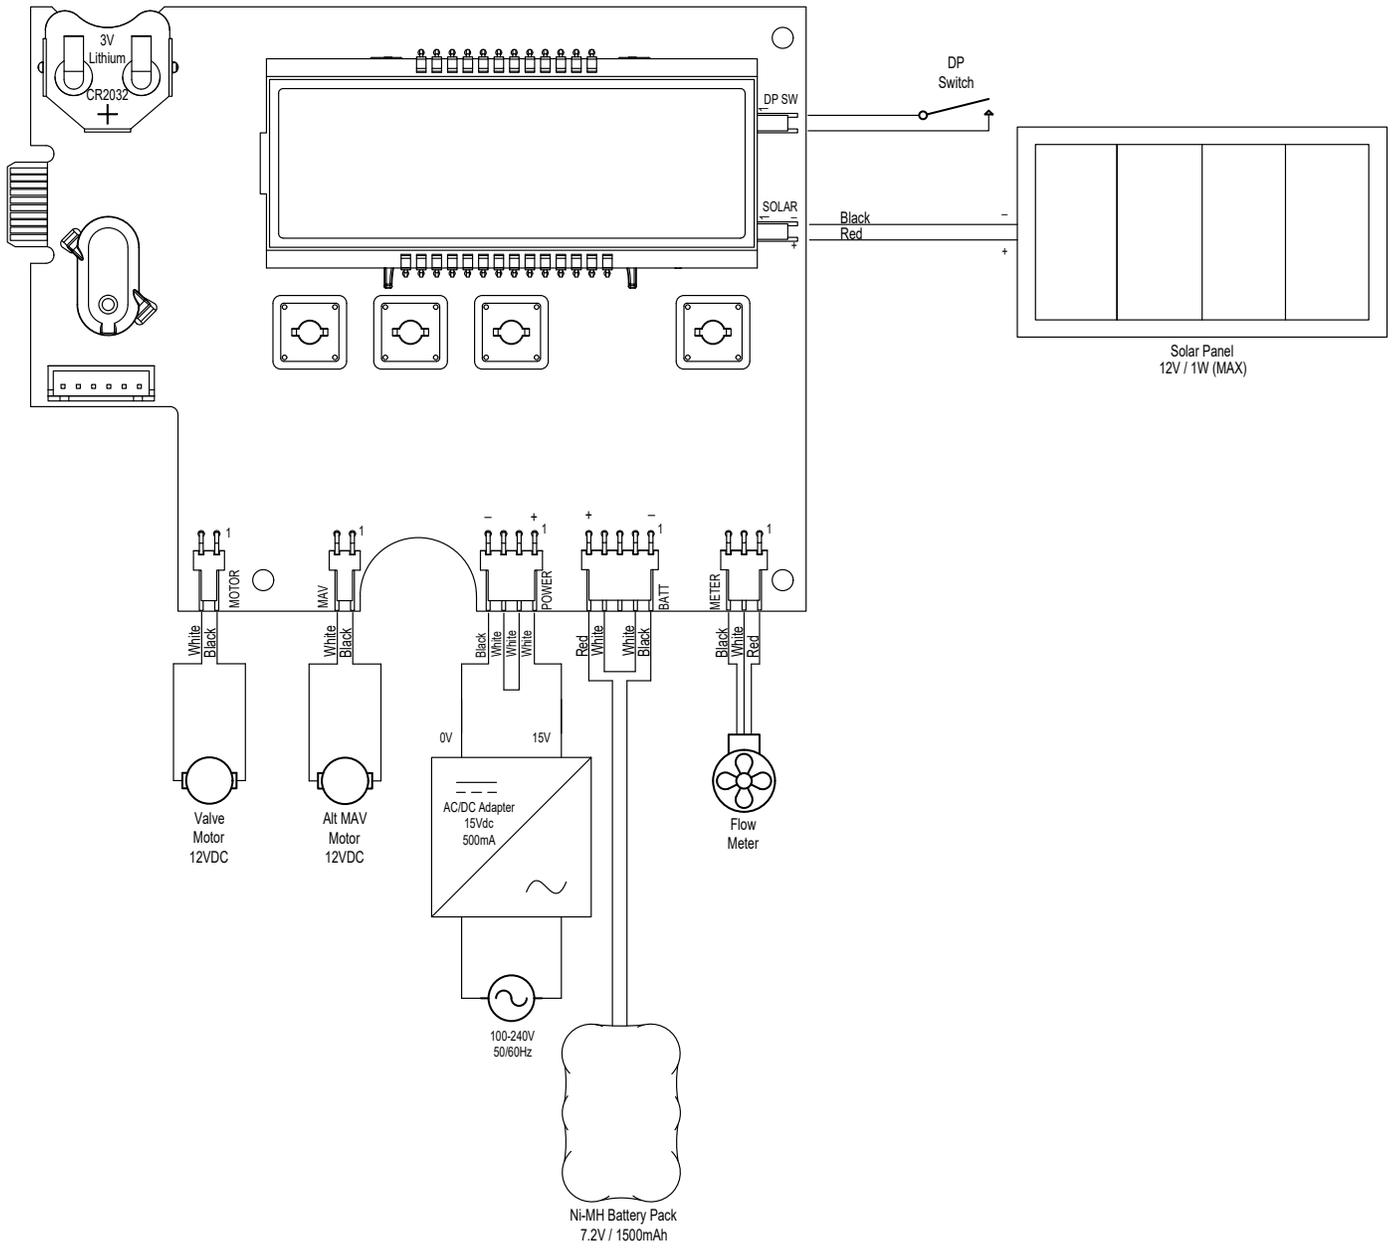

## Regeneration and Error Screens



### Regen Screen

Displays the time remaining in the current cycle. Pressing REGEN advances to the next cycle.



### Error Screen

Alternated flashing Err and error code every 3 seconds. Clear by disconnecting the power supply at the PC board and reconnecting, or press NEXT and REGEN simultaneously for 3 seconds.



In Alternator Systems when a unit is waiting to initiate the first cycle step of regeneration, “REGEN Pndg” is displayed.



“STbY” is displayed in Alternator Systems when a valve is in Standby state.

## Button Operation and Function



Scrolls to the next display.

Pressing once and releasing will schedule a regeneration at the preset delayed regeneration time.

Pressing again and releasing will cancel the regeneration.



Pressing and holding for 3 seconds will initiate an immediate regeneration

Pressing while in regeneration will advance to the next cycle.

Pressing in the program levels will go backwards to the previous screen



Changes variable being displayed.



Key sequence to lock and unlock program settings.



Holding for 3 seconds initiates a control reset. The software version is displayed and the piston returns to the home/service position, resynchronizing the valve.



Used with valve type 1.0Γ, holding for at least 3 seconds causes a switch in the tank in Service without cycling the regeneration valve. After tank switch, days remaining and capacity remaining status is retained for each tank until the next regeneration.

## Regeneration Cycles and Times

Cycle	Range		
	Softening	Filtering Regen	Filtering Backwash
Backwash	1-120 minutes	1-120 minutes	1-120 minutes
Regenerant Draw/Slow Rinse (UP or DN)	1-180 minutes	1-180 minutes	N/A
Fast Rinse	1-120 minutes	1-120 minutes	1-120 minutes
Regenerant Refill	0.05-90 kg	0.2-76 L	N/A
Regenerant Refill 2.0 or 1.5 set to MIN (softening only)	0.1-99 minutes	0.1-99 minutes	N/A
Service	1-480 minutes	N/A	N/A


If 1.5 or 2.0 is selected in Step 2CS, cycles can be set to “OFF”.

The user can initiate manual regeneration. The user has the option to request the manual regeneration at the delayed regeneration time or to have the regeneration occur immediately:

1. Pressing and releasing the REGEN button. “REGEN TODAY” will flash on the display and the regeneration will occur at the delayed regeneration time. The user can cancel the request by pressing and releasing the REGEN button.
2. Pressing and holding the REGEN button for approximately 3 seconds will immediately start the regeneration. The user cannot cancel this request, except by resetting the control by pressing NEXT and REGEN simultaneously for 3 seconds.

## User Displays
 
### General Operation

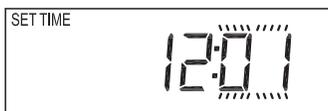

When the system is operating, one of five displays may be shown. Pressing NEXT will alternate between the displays shown below.

#### User 1

Typical user display. Shows volume remaining to regeneration. This screen will not be viewed if the control is set for time-clock operation.

#### User 2

Displays number of days to next regeneration. Only displayed if control is set for time-clock operation.

#### User 3

Flow Rate.

Displays present flow rate.

Not viewed (along with SOFTENING or FILTERING Icon) if ALT A or ALT b is set in Step 5CS and the valve is currently in Standby. When 1.0T is set in Step 2CS, the display will indicate the tank currently in Service ("A" or "b") in the leftmost digit.

#### User 4

Displays total volume in gallons since last reset. If a meter is not used this display will be shown but 0 will be displayed.

PRESS ▼ FOR 3 SECONDS TO RESET TO 0.

#### User 5

Shows current time. When FILL is displayed, the battery pack is being charged.





#### Setting Time of Day

Push NEXT until time of day screen is displayed. Press and hold ▼ until SET TIME is displayed and the hour flashes once. Press ▲ or ▼ until the correct hour is displayed.

Then press NEXT. The minutes will flash. Press ▲ or ▼ until the correct minute is displayed.

Press NEXT to return to the User Displays. Time of day should only need to be set after power outages lasting more than 8 hours, if the battery has been depleted and a power outage occurs, or when daylight saving time begins or ends. If a power outage lasting more than 8 hours occurs, the time of day will flash on and off which indicates the time of day should be reset. If a power outage lasts less than 8 hours and the time of day flashes on and off, the time of day should be reset and the battery replaced.


## Configuration Settings

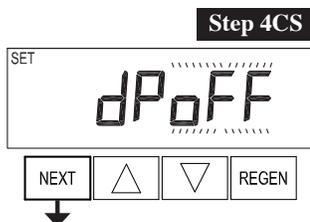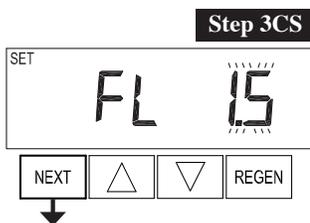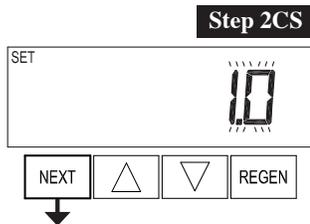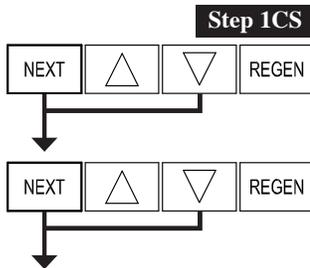

**Step 1CS** – Press NEXT and ▼ simultaneously for 5 seconds and release. Press NEXT and ▼ simultaneously for 5 seconds and release. If the screen in Step 2CS does not appear, the lock on the valve is activated. To unlock, press ▼, NEXT, ▲ and REGEN in sequence, then press NEXT and ▼ simultaneously for 5 seconds and release. Press NEXT and ▼ simultaneously for 5 seconds and release.

**Step 2CS** – Use ▲ or ▼ to select 1.0 for 1” valve, 1.25 for 1.25” valve, 1.5 for 1.5” valve, 2.0 for 2” valve or 1.0T for twin valve. Press NEXT to go to Step 3CS. Press REGEN to exit Configuration Settings.

**Step 3CS** – If 1.5 or 2.0 is selected in Step 2CS, an additional screen will appear. It is used to select which size flow meter is to be used with the valve, 1.0r, 1.5, 2.0 or 3.0. Variable meter pulses of 0.1-150.0 PPL can also be selected. Press NEXT to go to Step 4CS. Press REGEN to return to the previous step.

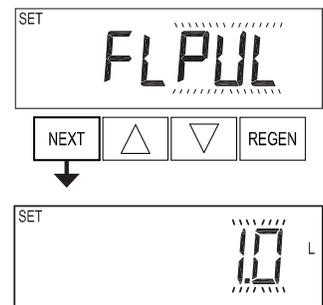

**Step 4CS** – Selecting the use of an outside signal to initiate a regeneration: Selection only matters if a connection is made to the two pin connector labeled DP SWITCH located on the printed circuit board. Following is an explanation of the options:

oFF - feature not used

NOTE: In a twin alternating system each control must have a separate dP signal or dP switch. One dP signal or one dP switch cannot be used for both controls.


on0 – If the dP switch is closed for 2 uninterrupted minutes a regeneration will be signaled to the unit. In a twin alternating system the MAV will transition first to switch units so that the signaled unit can start regeneration. After the MAV has fully transitioned, the regeneration begins immediately. Note: For WS1 – WS1.5 control valves programmed for twin alternating: if the dP function “on0” is set, the Delayed Rinse and Fill feature is not available.

dEL – If the dP switch is closed for 2 uninterrupted minutes a regeneration will occur at the scheduled delayed regeneration time. In a twin alternating system, at the delayed regeneration time the control will switch tanks and the triggered unit will go into regeneration. Note: For WS1 – WS1.5 control valves programmed for twin alternating: if the dP function “dEL” is set, the Delayed Rinse and Fill feature is not available.

HoLd – If the dP switch is closed a regeneration will be prevented from occurring while there is switch closure. In a twin alternating system the regeneration of a unit can be prevented upon switch closure. If the unit depletes the capacity down to zero, it will not be allowed to switch tanks to regenerate until the switch is open. Note: For WS1 – WS1.5 control valves programmed for twin alternating the Delayed Rinse and Fill feature can be set.

Press NEXT to go to Step 5CS. Press REGEN to return to previous step.

**Step 5CS**

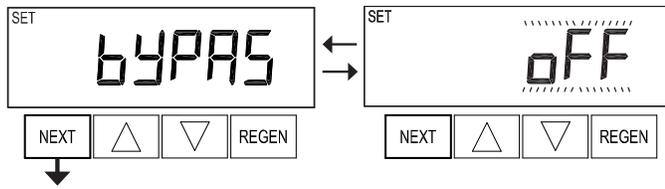

**Step 5CS** – This display will not appear if 1.0T was selected in Step 2CS. Allows selection of one of the following using ▲ or ▼:

- the Control Valve to have no hard water bypass; or
- the Control Valve to have a separate source during the regeneration cycle.

Select OFF when none of these features are used.

Alternating Valves (MAV) with these selections. Clack No Hard Water Bypass Valves (1” or 1.25” V3070FF or V3070FM) are not designed to be used with the alternator or separate source functions.

Only use Clack No Hard Water Bypass Valves or Clack Motorized

**Configuring the Control Valve for No Hard Water Bypass Operation:**

Select nHbP for control operation. For no hard water bypass operation the three wire communication cable is not used.



Selection requires that a connection to MAV or a Clack No Hard Water Bypass Valve is made to the two pin connector labeled MAV located on the printed circuit board. If using a MAV, the A port of the MAV must be plugged and the valve outlet connected to the B port. When set to nHbP the MAV will be driven closed before the first regeneration cycle that is not FILL or SOFTENING or FILTERING, and be driven open after the last regeneration cycle that is not FILL.

NOTE: If the control valve enters into an error state during regeneration mode, the no hard water bypass valve will return to the open Position, if not already there.

**Configuring the Control Valve for Separate Source Operation:**

Select SEPS for control operation. For separate source operation the three wire communication cable is not used.



Selection requires that a connection to a Clack Motorized Alternating Valve (MAV) is made to the two pin connector labeled MAV located on the printed circuit board. The C port of the MAV must be connected to the valve inlet and the A port connected to the separate source used during regeneration. The B port must be connected to the feed water supply.

When set to SEPS the MAV will be driven closed before the first regeneration cycle, and be driven open after the last regeneration cycle.


NOTE: If the control valve enters into an error state during regeneration mode, the MAV will return to the open position, if not already there.

**1.0T Valve**

With 1.0T set, a display will allow the user to set the amount of pre-service rinse time for the standby tank just prior to returning to service. Set to oFF to deactivate this feature.




**Step 6CS**

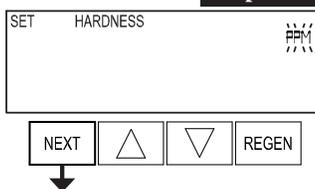

**Step 6CS** – Use ▲ or ▼ to select Hardness Units. Select PPM, dH or FH. Press NEXT to go to Step 7CS. Press REGEN to return to previous step.

**Step 7CS**

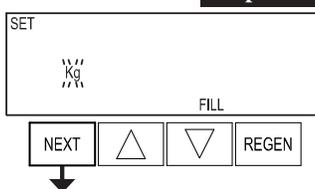


**Step 7CS** – Fill Units: If set as a softener, if Step 2CS is set to 1.5, and FILL is part of the Regeneration Cycle Sequence, FILL UNITS of MIN or kg can be selected. Press NEXT to exit OEM Configuration Setup. Press REGEN to return to previous step.



**EXIT TO DISPLAY SCREENS**

 
## OEM Softener System Setup

### Step 1S

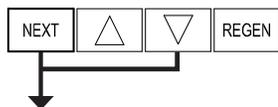


**Step 1S** - Press NEXT and ▼ simultaneously for 5 seconds and release. If screen in Step 2S does not appear, the lock on valve programming has been activated. To unlock press ▼, NEXT, ▲, REGEN in sequence, then press NEXT and ▼ simultaneously for 5 seconds and release.

### Step 2S

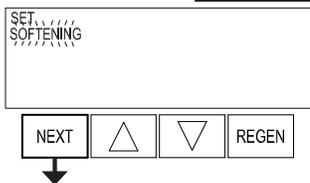


**Step 2S** – Choose SOFTENING using ▲ or ▼. Press NEXT to go to Step 3S. Press REGEN to exit OEM Softener System Setup.

### Step 3S

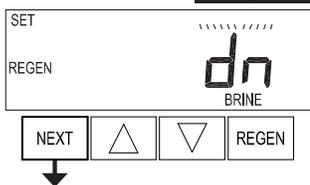

**Step 3S** – Choose Brining Direction using ▲ or ▼. This screen is not viewed when Step 2S is set to Filtering. Press NEXT to go to Step 4S. Press REGEN to return to previous step.


### Step 4S

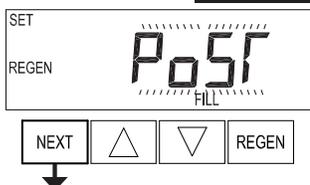

**Step 4S** – Set Refill location using ▲ or ▼:


- “PoST” to refill the brine tank after the final rinse; or
  - “PrE” to refill the brine tank four hours before the regeneration time set.
- This screen is not viewed when Step 2S is set to Filtering. Press NEXT to go to Step 5S. Press REGEN to return to previous step.

### Step 5S

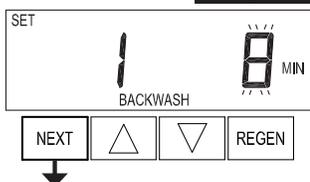


**Step 5S** – Select the time for the first cycle using ▲ or ▼. For valve types 1.5 and 2.0, “oFF” is also available. Press NEXT to go to Step 6S. Press REGEN to return to previous step.

### Step 6S

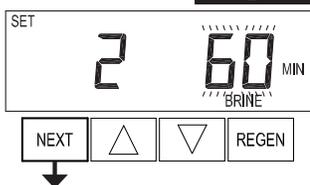


**Step 6S** – Select the time for the second cycle using ▲ or ▼. For valve types 1.5 and 2.0, “oFF” is also available. NOTE: The display will alternate between the time and brine direction (UP or dn). Press NEXT to go to Step 7S. Press REGEN to return to previous step.

### Step 7S

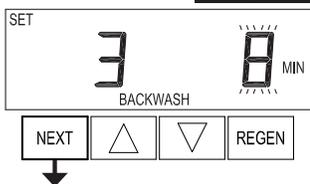


**Step 7S** – Select the time for the third cycle using ▲ or ▼. For valve types 1.5 and 2.0, “oFF” is also available. Press NEXT to go to Step 8S. Press REGEN to return to previous step.

### Step 8S

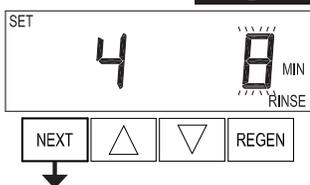

**Step 8S** – Select the time for the fourth cycle using ▲ or ▼. For valve types 1.5 and 2.0, “oFF” is also available. Press NEXT to go to Step 9S. Press REGEN to return to previous step.

**Step 9S**

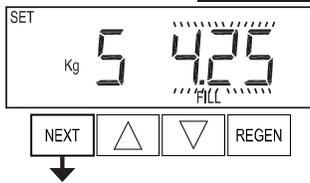


**Step 9S** – Select the kilograms for the fifth cycle using ▲ or ▼. For valve types 1.5 and 2.0, “oFF” is also available.

NOTE: if Step 2CS is set to 2.0 or Step 6CS is set to MIN, Fill will be in minutes.


Press NEXT to go to Step 10S. Press REGEN to return to previous step.

**Step 10S**

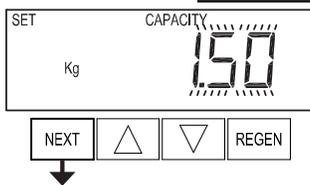

**Step 10S** – Set System Capacity using ▲ or ▼. The System Capacity setting should be based on the volume of resin and kg of salt fill set in Step 9S. Press NEXT to go to Step 11S. Press REGEN to return to previous step.

**Step 11S**

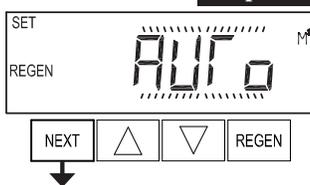


**Step 11S** – Set Volume Capacity using ▲ or ▼. If value is set to:

- “AUTO” capacity will be automatically calculated and reserve capacity will be automatically estimated;
- “oFF” regeneration will be triggered by the day override setting, or can be set to regenerate on specific days of the week.

- a number, regeneration will be triggered by the value specified m<sup>3</sup>.

If “oFF” or a volume is used, the hardness display will not be allowed to be set in Installer Display Settings Step 2I. See Setting Options Table for more detail. Press NEXT to go to Step 12S. Press REGEN to return to previous step.

**Step 12S**

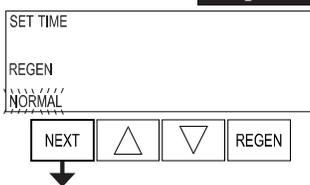

**Step 12S** – Set Regeneration Time Options using ▲ or ▼. NOTE: This step will not appear if Step 11S is set to oFF or Step 5CS is set to “SYS”.

If value is set to:

- “NORMAL” means regeneration will occur at the preset time;
- “on 0” means regeneration will occur immediately when the volume capacity reaches 0 (zero); or
- “NORMAL + on 0” means regeneration will occur at one of the following:
  - the preset time when the volume capacity falls below the reserve or the specified number of days between regenerations is reached whichever comes first; or
  - immediately after 10 minutes of no water usage when the volume capacity reaches 0 (zero).

“on 0” is the default if Step 2CS is set to 1.0T, and “NORMAL + on 0” is not available.

See Setting Options Table for more detail. Press NEXT to exit Softener System Setup. Press REGEN to return to previous step.

**EXIT OEM  
SOFTENER  
SYSTEM SETUP**

Setting Options Table<sup>1</sup>

System Type	Regeneration Option	Regeneration Type	Day Override	
Softening	Auto	Normal	1-28 days	Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity, or the specified number of days is reached, whichever comes first.
Softening	Auto	Normal	OFF	Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity.
Softening or Filtering	0.02 – 5700.0 m <sup>3</sup>	Normal	1-28 days	Regeneration occurs at the next regeneration time when volume capacity reaches 0, or the specified number of days is reached, whichever comes first.
Softening or Filtering	0.02 – 5700.0 m <sup>3</sup>	Normal	OFF	Regeneration occurs at the next regeneration time when volume capacity reaches 0.
Softening or Filtering	OFF	Normal	1-28 days	Time Clock operation. Regeneration occurs at the next regeneration time the specified number of days is reached.
Softening	Auto or 0.02 – 5700.0 m <sup>3</sup>	On 0	1-28 days	Regeneration occurs immediately when volume capacity reaches 0, or the specified number of days is reached, whichever comes first.
Softening or Filtering	0.02 – 5700.0 m <sup>3</sup>	On 0	OFF	Regeneration occurs immediately when volume capacity reaches 0.
Softening	Auto	Normal + On 0	1-28 days	Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity, or the specified number of days is reached, or regeneration occurs after 10 minutes of no water usage when volume capacity reaches 0.
Softening or Filtering	0.02 – 5700.0 m <sup>3</sup>	Normal + On 0	1-28 days	Regeneration occurs at the next regeneration time the specified number of days is reached or regeneration occurs after 10 minutes of no water usage when volume capacity reaches 0.
Softening	Auto	Normal + On 0	OFF	Regeneration occurs at the next regeneration time when volume capacity falls below the reserve capacity, or regeneration occurs after 10 minutes of no water usage when volume capacity reaches 0.


<sup>1</sup> Reserve Capacity estimate is based on history of water usage. Reserve Capacity estimate is not available with alternator systems or Twin Tank Valve.

## OEM Filter System Setup

 Cycle Sequence, Adjustable Default Times (minutes)						
Type	Backwash	Draw	Backwash	Rinse	Backwash*	Fill
Filtering Backwash	8			4		
Filtering Regen	8	60	8	8	0:30	4.20 L
Filtering Regen (2.0")	8	60	8	8	0:30	6


\*Cycle is non-adjustable, not shown in cycle sequence programming.

**Step 1F**

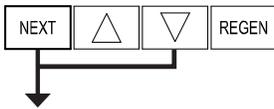


**Step 1F** - Press NEXT and ▼ simultaneously for 5 seconds and release. If screen in Step 2F does not appear, the lock on the valve is activated. To unlock press ▼, NEXT, ▲, REGEN in sequence, then press NEXT and ▼ simultaneously for 5 seconds and release.

**Step 2F**

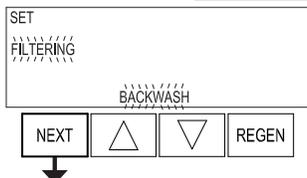


**Step 2F** – Choose FILTERING BACKWASH or FILTERING REGEN (see table) using ▲ or ▼. Press NEXT to go to Step 3F. Press REGEN to exit OEM Filter System Setup.

**Step 3F**

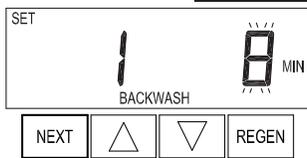

**Step 3F** – Select the time for the first cycle using ▲ or ▼. Press NEXT to go to Step 4F. Press REGEN to return to previous step.

**Step 4F**

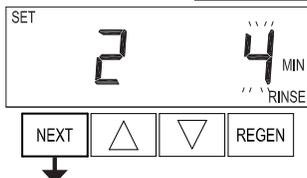

**Step 4F** – Select the time for the second cycle using ▲ or ▼. If Step 2F is set to FILTERING REGEN, press NEXT to program the rest of the cycle times. If Step 2F is set to FILTERING BACKWASH, press NEXT to go to Step 5F. Press REGEN to return to previous step.

**Step 5F**




**Step 5F** – Set Regeneration trigger using ▲ or ▼. If value is set to:

- “oFF” regeneration will be triggered by the day override setting or can be set to regenerate on specific days of the week.
- a number, regeneration will be triggered by the value specified (in m<sup>3</sup>).

See Setting Options Table for more detail. Press NEXT to go to Step 6F. Press REGEN to return to previous step.

**Step 6F**

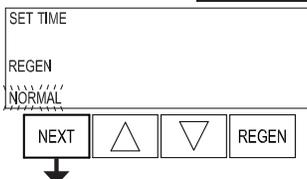

**Step 6F** – Set Regeneration Time Options using ▲ or ▼. NOTE: This step will not appear if Step 5F is set to oFF.

If value is set to:

- “NORMAL” means regeneration will occur at the preset time;
- “on 0” means regeneration will occur immediately when the volume capacity reaches 0 (zero); or
- “NORMAL + on 0” means regeneration will occur at one of the following:
  - the preset time when the volume capacity falls below the reserve or the specified number of days between regenerations is reached whichever comes first; or
  - immediately after 10 minutes of no water usage when the volume capacity reaches 0 (zero).


“on 0” is the default if Step 2CS is set to 1.0T, and “NORMAL + on 0” is not available.

**EXIT OEM FILTER SYSTEM SETUP**

 
See Setting Options Table for more detail. Press NEXT to exit Filter System Setup. Press REGEN to return to previous step.

## Installer Display Settings


### Step 1I

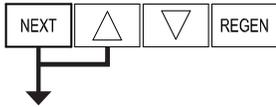


### Step 2I

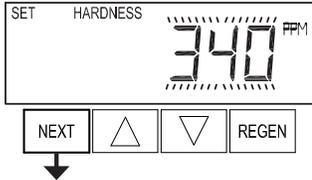

### Step 3I

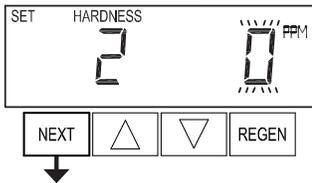

### Step 4I

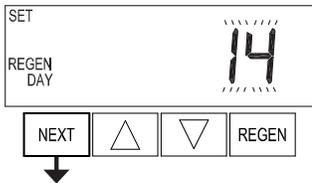

### Step 5I



### Step 6I



**EXIT INSTALLER DISPLAY SETTINGS**

**Step 1I** - To enter Installer Display press NEXT and ▲ simultaneously for about 5 seconds and release.

**Step 2I** – Hardness: Set the amount of influent hardness using ▲ or ▼. This display will not be viewed if FILTERING BACKWASH or FILTERING REGEN is selected in Step 2F or if “oFF” or a number was selected in Step 11S.

Press NEXT to go to Step 3I. Press REGEN to exit Installer Display Settings.

**Step 3I** – Service Water Hardness - If a mixing valve is installed in the valve, service hardness needs to be set. Setting range is always less than the setting in Step 2I. This screen will not be displayed when valve is set to 1.5 or 2.0 valve type, is set as a Filter, or if Auto is not selected in Step 8S.

Press NEXT to go to Step 4I. Press REGEN to return to previous step.

Units Available
PPM
dH
FH

**Step 4I** – Day Override: When volume capacity is set to “oFF”, sets the number of days between regenerations. When volume capacity is set to AUTO or to a volume, sets the maximum number of days between regenerations. If value set to “oFF”, regeneration initiation is triggered solely by volume used. If value is set in days (allowable range from 1 to 28) regeneration initiation will be called for on that day regardless of actual water usage. Set Day Override using ▲ or ▼:

- number of days between regeneration (1 to 28); or
- “oFF”.

See Setting Options Table for more detail on setup.

Press NEXT to go to Step 5I. Press REGEN to return to previous step.


**Step 5I** – Next Regeneration Time (hour): Set the hour of day for regeneration using ▲ or ▼. The default time is 2:00. This display will show “REGEN on 0 GAL” if “on 0” is selected in Set Regeneration Time Option in OEM Softener System Setup or OEM Filter System Setup.

Press NEXT to go to Step 6I. Press REGEN to return to previous step.

**Step 6I** – Next Regeneration Time (minutes): Set the minutes of day for regeneration using ▲ or ▼. This display will not be shown if “on 0” is selected in Set Regeneration Time Option in OEM Softener System Setup or OEM Filter System Setup.

Press NEXT to exit Installer Display Settings. Press REGEN to return to previous step.

## Diagnostics

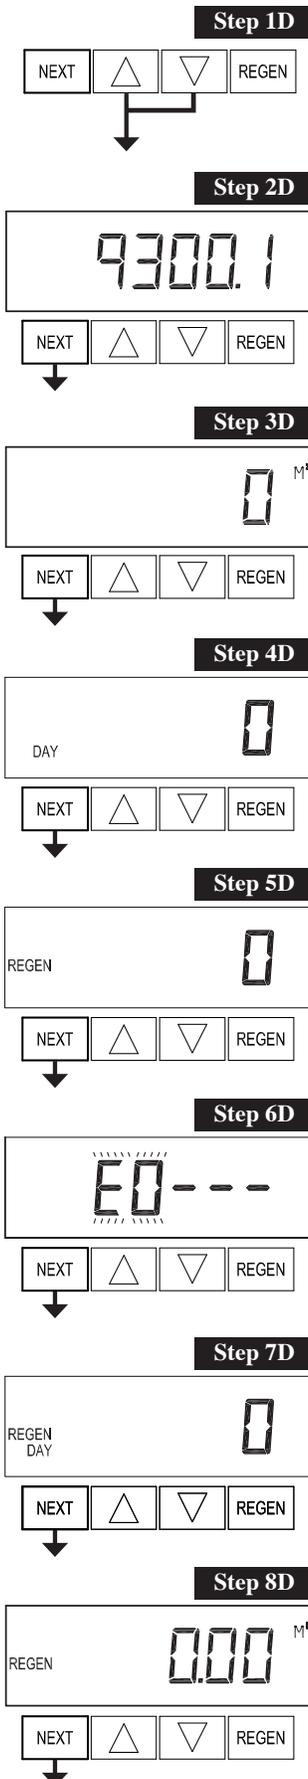

**Step 1D** - Press ▲ and ▼ simultaneously for 5 seconds and release. If screen in Step 2D does not appear the lock on the valve is activated. To unlock press ▼, NEXT, ▲, REGEN in sequence, then press ▲ and ▼ simultaneously for 5 seconds and release.

**Step 2D** – Software Version. Press NEXT to go to Step 3D. Press REGEN to exit Diagnostics.

**Step 3D** – Volume, total used since start-up: This display shows the total m<sup>3</sup> treated since startup. This display will equal zero if a water meter is not installed. Press the NEXT button to go to Step 4D. Press REGEN to return to previous step.


**Step 4D** – Days, total since start-up: This display shows the total days since startup. Press the NEXT button to go to Step 5D. Press REGEN to return to previous step.

**Step 5D** – Regenerations, total number since start-up: This display shows the total number of regenerations that have occurred since startup. Press the NEXT button to go to Step 6D. Press REGEN to return to previous step.


**Step 6D** – Error Log: This display shows a history of the last 10 errors generated by the control during operation. Press ▲ or ▼ to view each recorded error. Press NEXT to go to Step 7D. Press REGEN to return to previous step.

**Step 7D** – Days, since last regeneration: This display shows the days since the last regeneration occurred. Press NEXT to go to Step 8D. Press REGEN to return to previous step.


**Step 8D** – Volume, since last regeneration: This display shows the volume of water that has been treated since the last regeneration. This display will equal zero when a water meter is not installed. Press NEXT to go to Step 9D. Press REGEN to return to previous step.

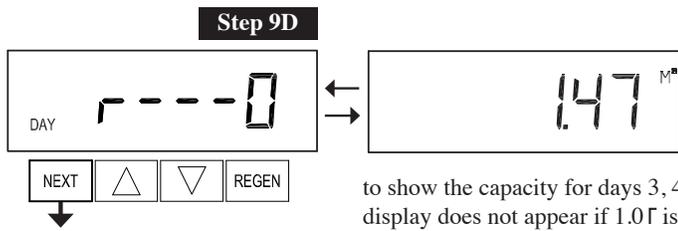


**Step 9D** – Volume, reserve capacity used for last 7 days: If the valve is set up as a softener, a meter is installed, and Set Volume Capacity is set to “Auto,” this display shows day 0 (for today) and flashes the reserve capacity. Pressing ▲ will show day 1 (which would be yesterday) and flashes the reserve capacity used. Pressing ▲ again will show day 2 (the day before yesterday) and the reserve capacity. Keep pressing ▲ to show the capacity for days 3, 4, 5 and 6. ▼ can be pressed to move backwards in the day series. This display does not appear if 1.0Γ is set in Step 2CS, if ALT A or ALT B are selected in Step 5CS, or anytime the reserve capacity is not determined by the control. Press NEXT at any time to go to Step 10D. Press REGEN to return to previous step.

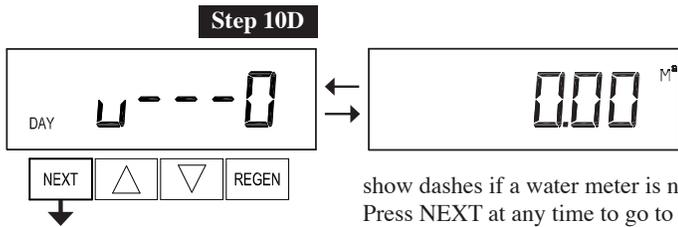

**Step 10D** – Volume, 63-day usage history: This display shows day 0 (for today) and flashes the volume of water treated today. Pressing ▲ will show day 1 (which would be yesterday) and flashes the volume of water treated on that day. Continue to press ▲ to show the maximum volume of water treated for the last 63 days. If a regeneration occurred on the day the word “REGEN” will also be displayed. This display will show dashes if a water meter is not installed. Press NEXT at any time to go to Step 11D. Press REGEN to return to previous step.


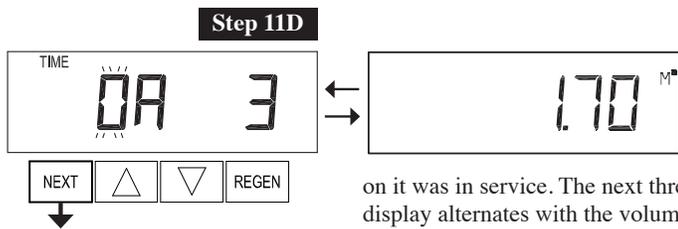


**Step 11D** – Twin Tank Valve transfer history: only displays when 1.0Γ was selected in Step 2CS. Use ▲ or ▼ to scroll through the last 10 tank transfers. The first position in the display ranges from 0 to 9 with the lowest number being the most recent transfer. The second position in the display will be either “A” or “b”. If “A” then the tank with the valve on it was in service, if “b” the tank with the in/out head on it was in service. The next three digits represent the number of hours ago that the transfer occurred. The display alternates with the volume that was treated before the tank transferred. Press NEXT at any time to go to Step 12D. Press REGEN to return to previous step.

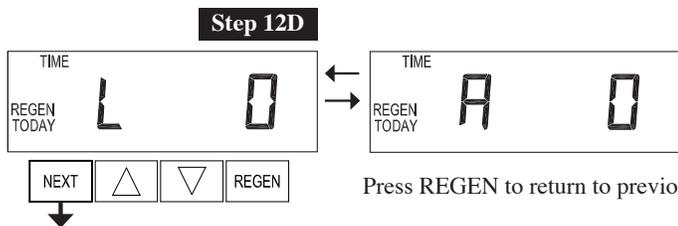

**Step 12D** – MAV Drive History in the direction of retracted piston rod position. Display will only be shown if 1.0Γ is selected in Step 2CS, or OFF is not selected in Step 5CS. Up to a four digit number will appear after the “L” which stands for latest and “A” which stands for average. Drive time is measured in 1/100 of a second; i.e., a 17.10 second move is displayed as “1710”. Press NEXT at any time to go to Step 13D. Press REGEN to return to previous step.

Press and hold ▲ and ▼ buttons for 3 seconds while in Step 12D to reset the MAV drive history in both the retracted and extended piston rod position. To view the old MAV drive history data for retracted and extended rod position press and hold REGEN and ▲ while in Step 12D. Press NEXT to advance display to the old MAV drive history.

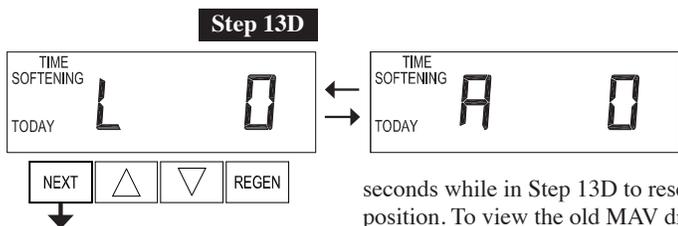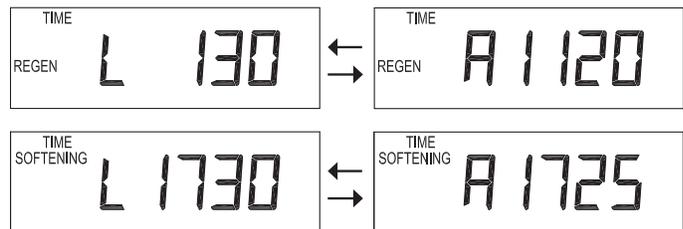


**Step 13D** – MAV Drive History in the direction of extended piston rod position. Display will only be shown if 1.0Γ is selected in Step 2CS, or OFF is not selected in Step 4CS. Up to a four digit number will appear after the “L” which stands for latest and “A” which stands for average. Drive time is measured in 1/100 of a second; i.e., a 17.15 second move is displayed as “1715”. Press and hold ▲ and ▼ for 3 seconds while in Step 13D to reset the MAV drive history in both the extended and retracted piston rod position. To view the old MAV drive history data see Step 12D. Press NEXT at any time exit Diagnostics. Press REGEN to return to previous step.

**EXIT DIAGNOSTICS**


## Battery Diagnostics

### Step 1BD

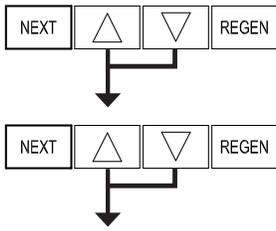


**Step 1BD** - Press ▲ and ▼ simultaneously for 5 seconds and release. Press ▲ and ▼ simultaneously for 5 seconds and release. If screen in Step 2BD does not appear the lock on the valve is activated. To unlock press ▼, NEXT, ▲, REGEN in sequence, then press ▲ and ▼ simultaneously for 5 seconds (twice) and release.

### Step 2BD

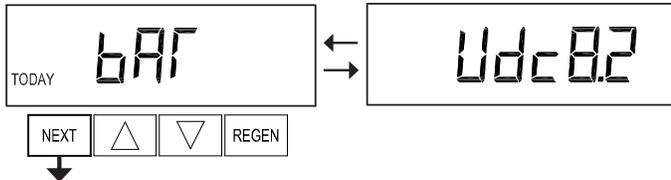


**Step 2BD** – Battery Pack Status – Pack Voltage. Displays the daily measured voltage of the battery pack under load. Press and hold ▲ and ▼ to initiate an immediate test of the battery pack . Press NEXT to go to Step 3BD. Press REGEN to exit Battery Diagnostics.

### Step 3BD

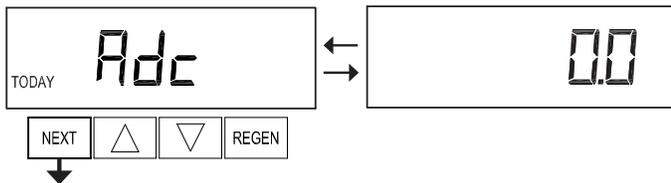

**Step 3BD** – Battery Pack Status – Charge Current. Displays the current measured charge current (in mA) of the control solar panel or AC wall adapter. A flashing SET indicates that the control is currently determining whether to activate the charging circuit. A flashing FILL indicates that the charging circuit is currently activated. Pressing ▲ will temporarily turn on the charging circuit. Pressing ▼ will temporarily turn off the charging circuit. Press NEXT to go to Step 4BD. Press REGEN to return to previous step.

### Step 4BD

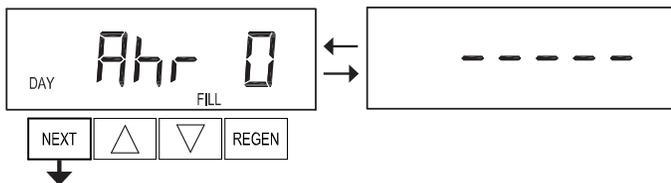

**Step 4BD** – Battery Pack Charge History. Displays the measure mAhr charge of the battery pack over the past 63 days. REGEN in the second display indicates that a regeneration occurred on that day. Press NEXT to exit Battery Diagnostics. Press REGEN to return to previous step.

**EXIT DIAGNOSTICS**

**Revision History:****11/2/2020****MAJOR UPDATE - NEW DISPLAYS AND OPERATION****5/14/2024****PAGE 4:**

4	V4072SQ-04BOARD	WS1THRU2 SQ SOLAR 20P PCB REPL	1
---	-----------------	--------------------------------	---

New drive bracket drawing

**PAGE 6:**

Regeneration Cycles and Times - updates in table

**PAGE 8:**

Step 4CS - on0 and dEL text modifications

**11/1/2024****PAGE 4:**

Restored drive bracket drawing

**12/10/2025****PAGE 5:**

Updated wiring diagram



